




NOTE: FLUIDAMPR 600701 IS FOR DUAL OVERHEAD CAM MODELS ONLY. NOT FOR USE ON SINGLE OVERHEAD CAM MODELS.

Installation of Fluidampr 600701

Install Fluidampr 600701 hand tight

Inspect back of Fluidampr to ensure clearance between damper and timing cover

Timing Belt Covers

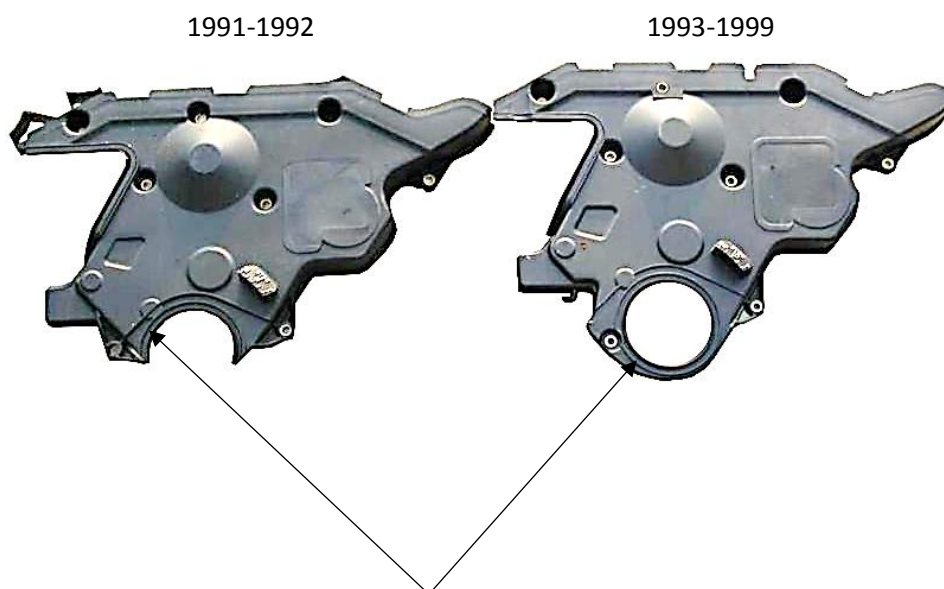

Cut, trim or grind timing lip to clear Fluidampr 600701 as needed.

Install Fluidampr ensuring to torque crank bolt to specified amount

Crank Bolt Torque	130-137 ft/lb
-------------------	---------------

Please contact Customer Tech at Fluidampr 716-592-1000
(www.fluidampr.com) for any comments, suggestions or questions.