



IMPORTANT: Please read before installing Fluidampr p/n 720221


Ford Powerstroke 7.3L (1994-1997)

BEFORE INSTALLING THE FLUIDAMPR, You must install the fan spacer.

Install fan spacer:

Step 1: Remove fan and shroud as per manufacturers instructions, draw a sketch of belt routing if required and remove the accessory drive belt.

Step 2: Install the fan spacer by threading it on to the end of the water pump shaft.

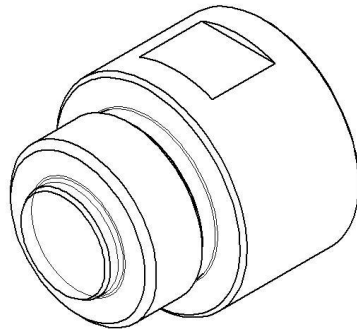

Step 3: Refer to Step 4 – Fluidampr installation of the attached instruction sheet.

Vibratech/Fluidampr
180 Zoar Valley Road
Springville, NY 14141

Phone 716-592-1000
Fax 716-592-1001
Web www.fluidampr.com
E-mail support@fluidampr.com

P/N: 4NFJ03
Revised 8/2019