




CHOOSING THE CORRECT HARMONIC DAMPER - LS

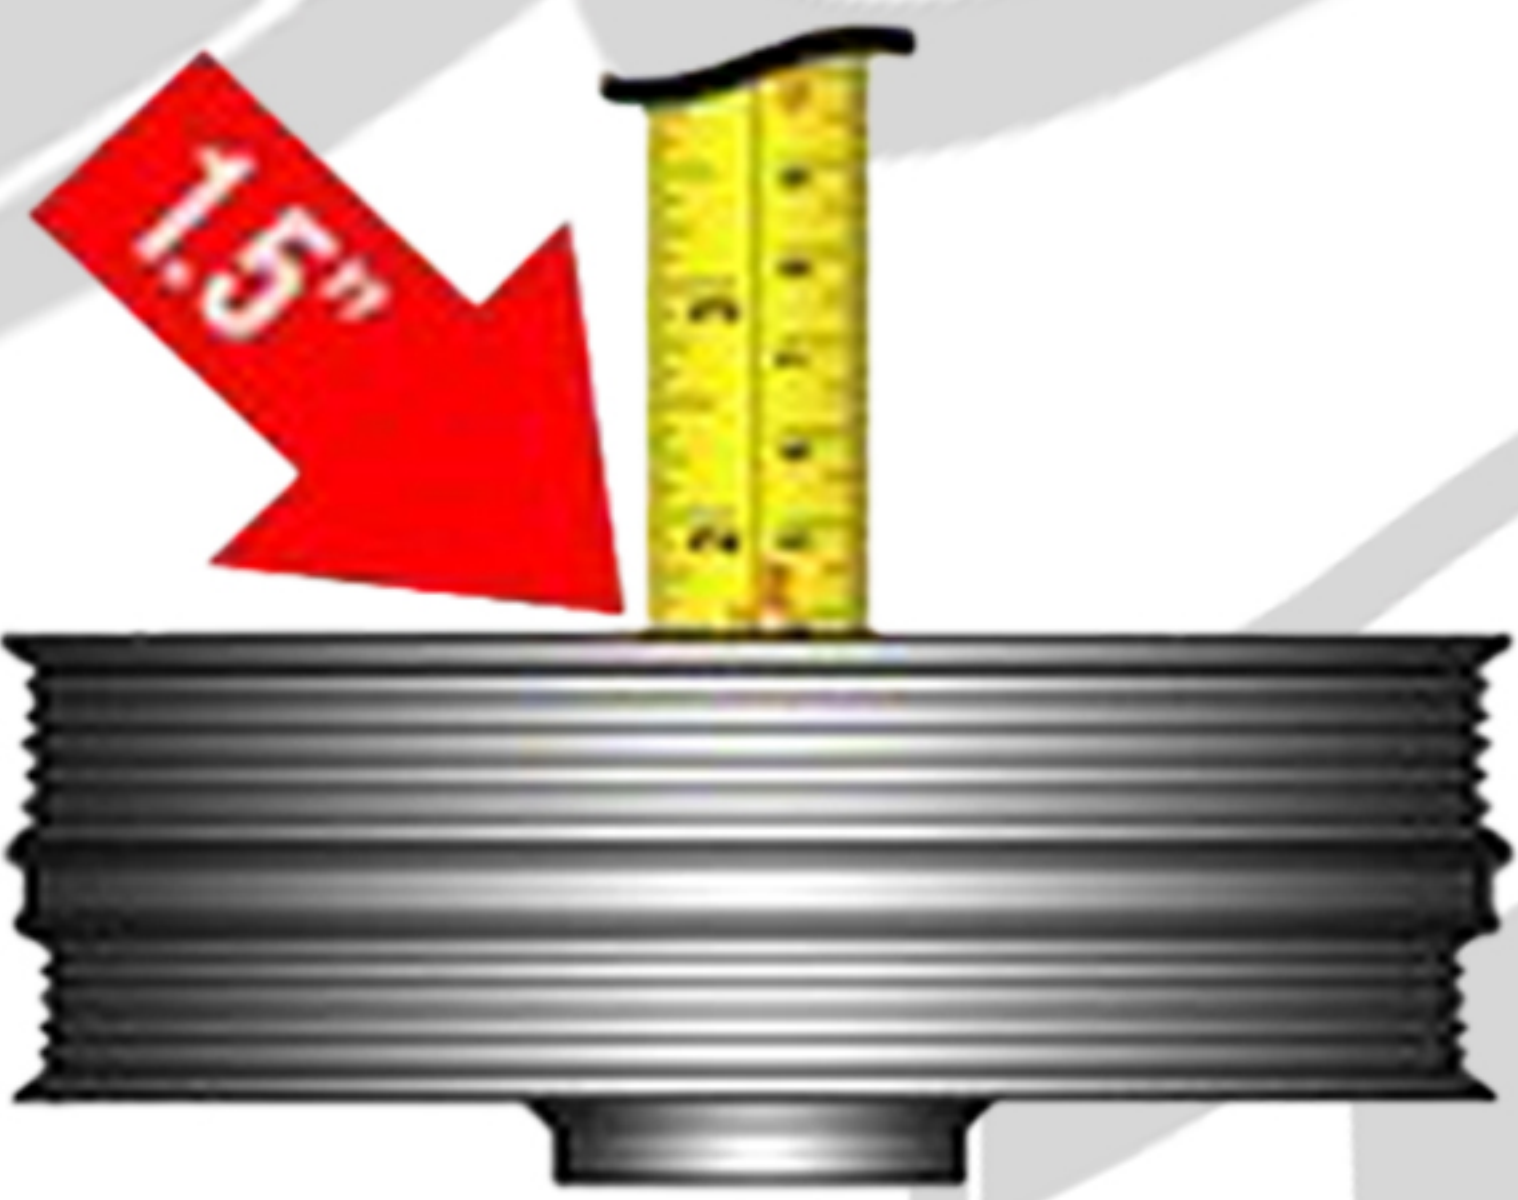


SHORT
CORVETTE / CTS-V / G8

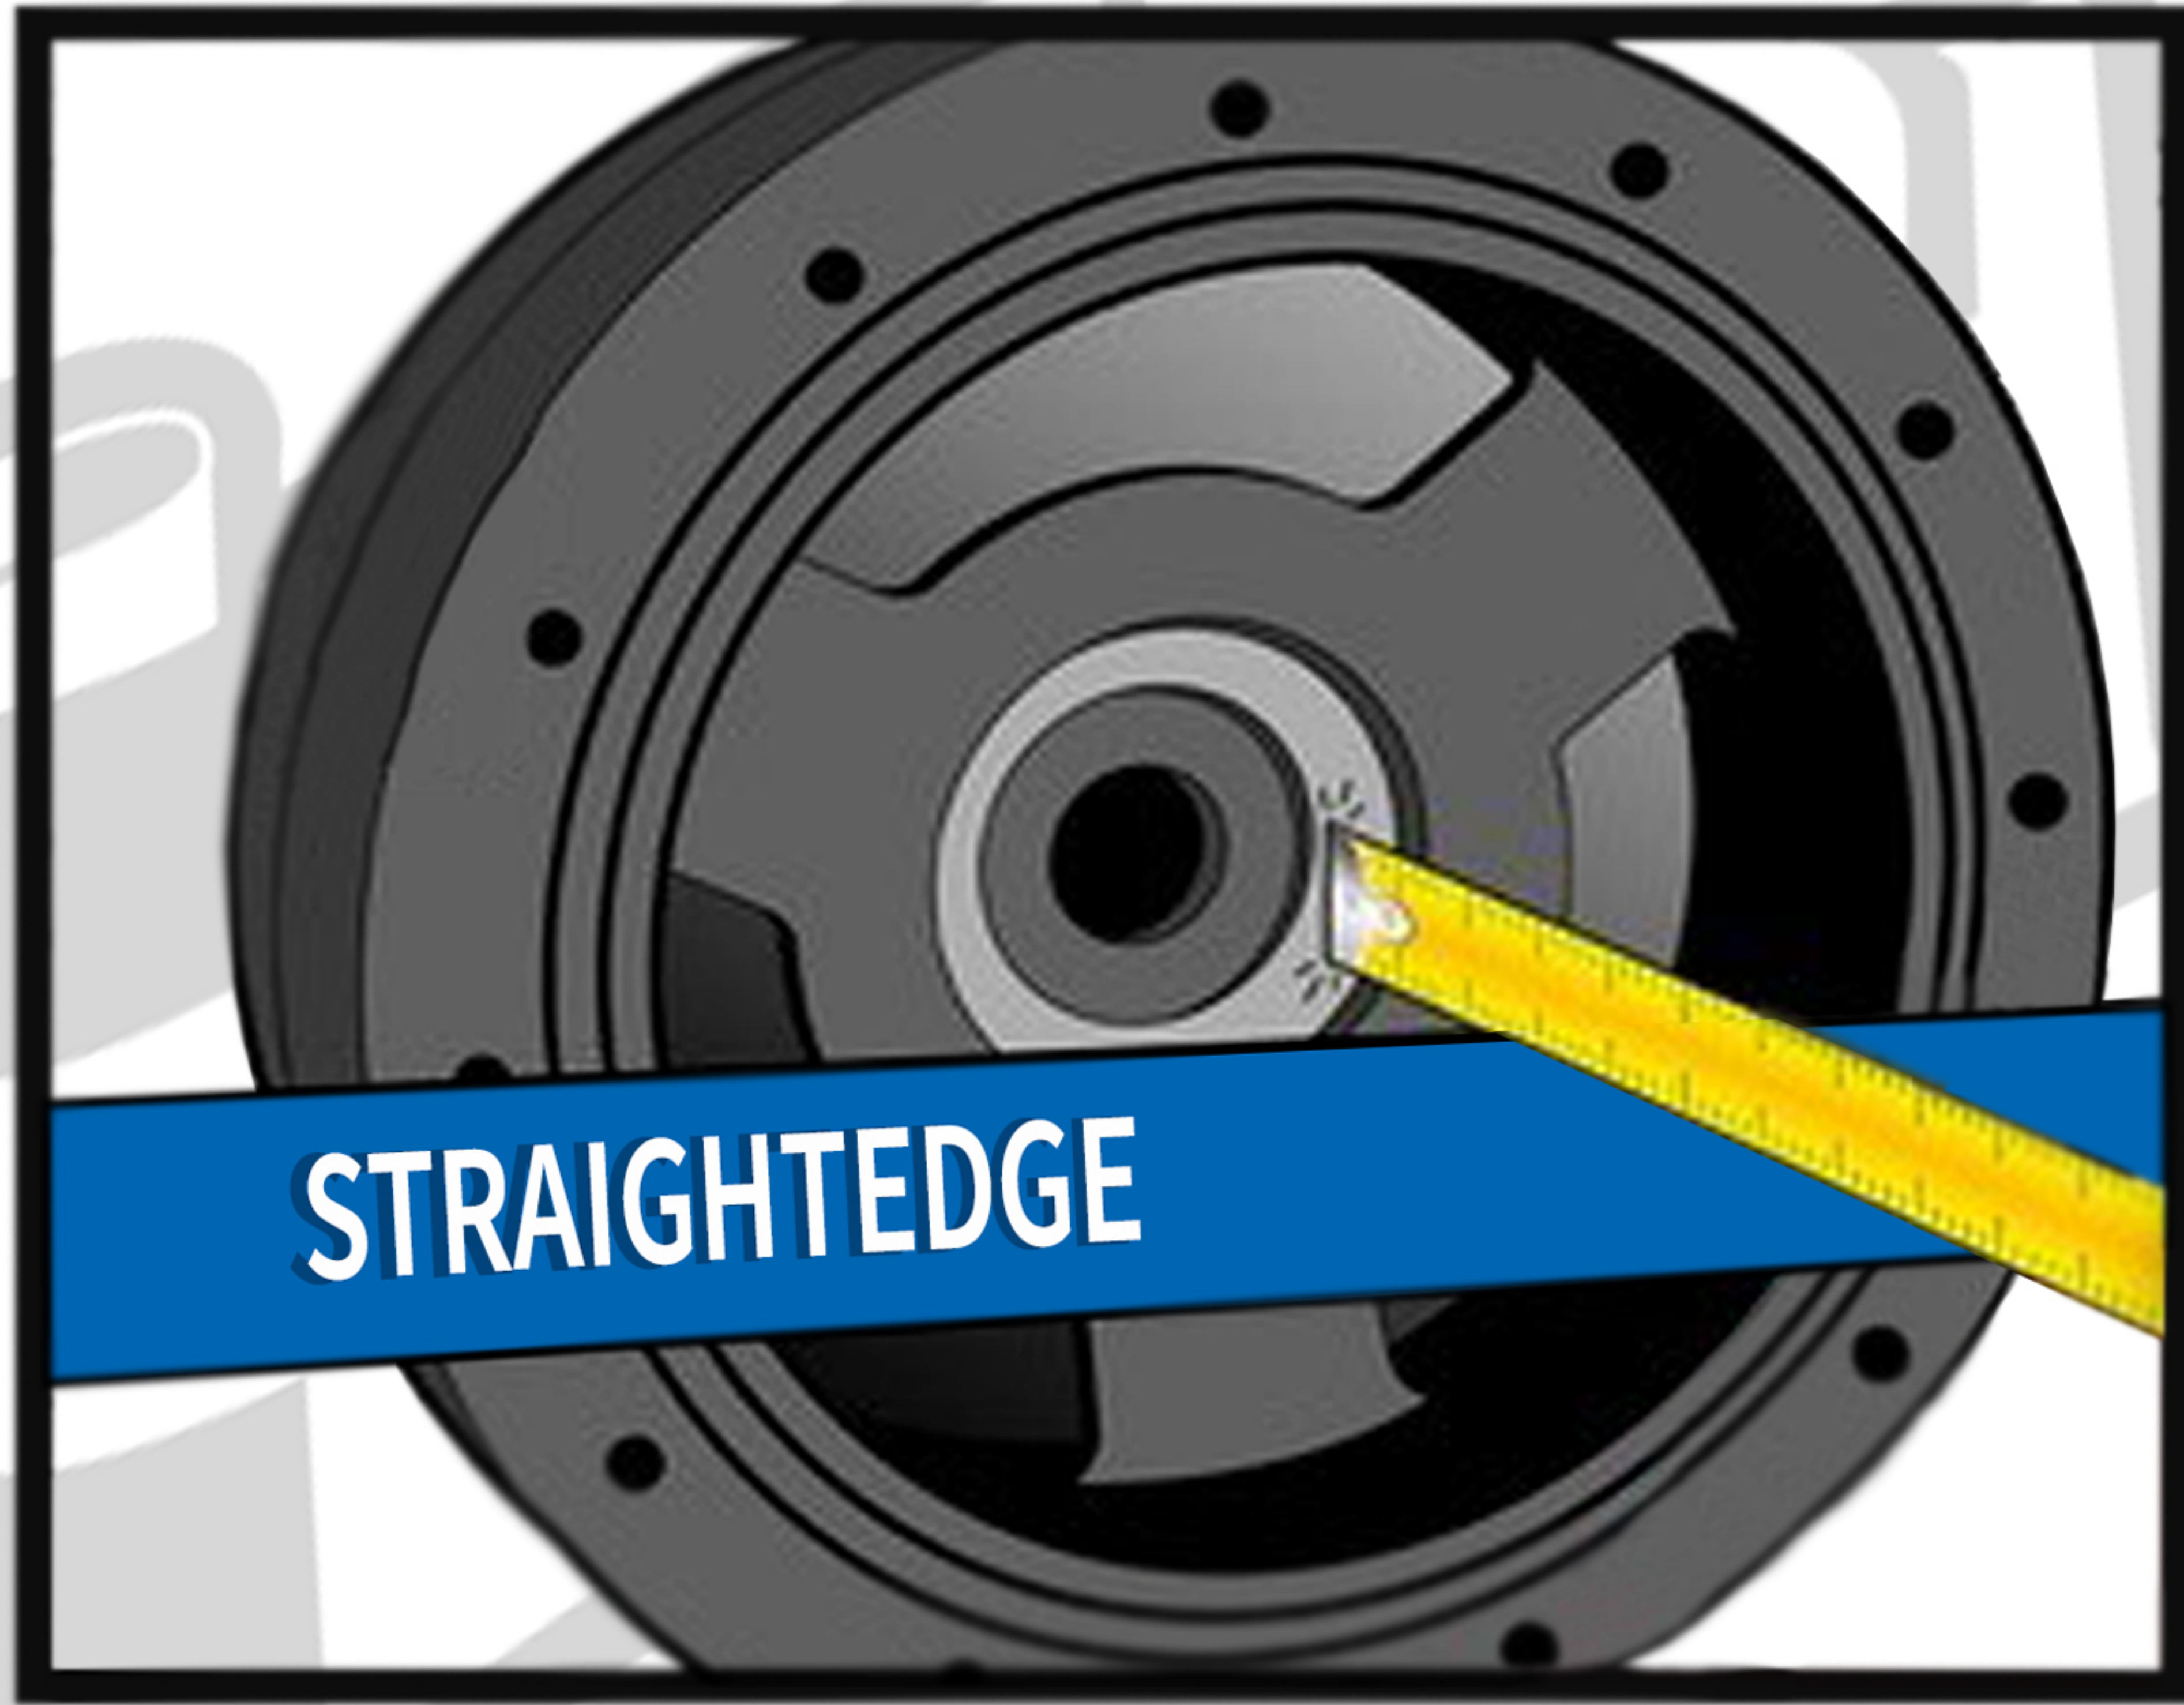


P/N 740121
P/N 620131 - no pulley

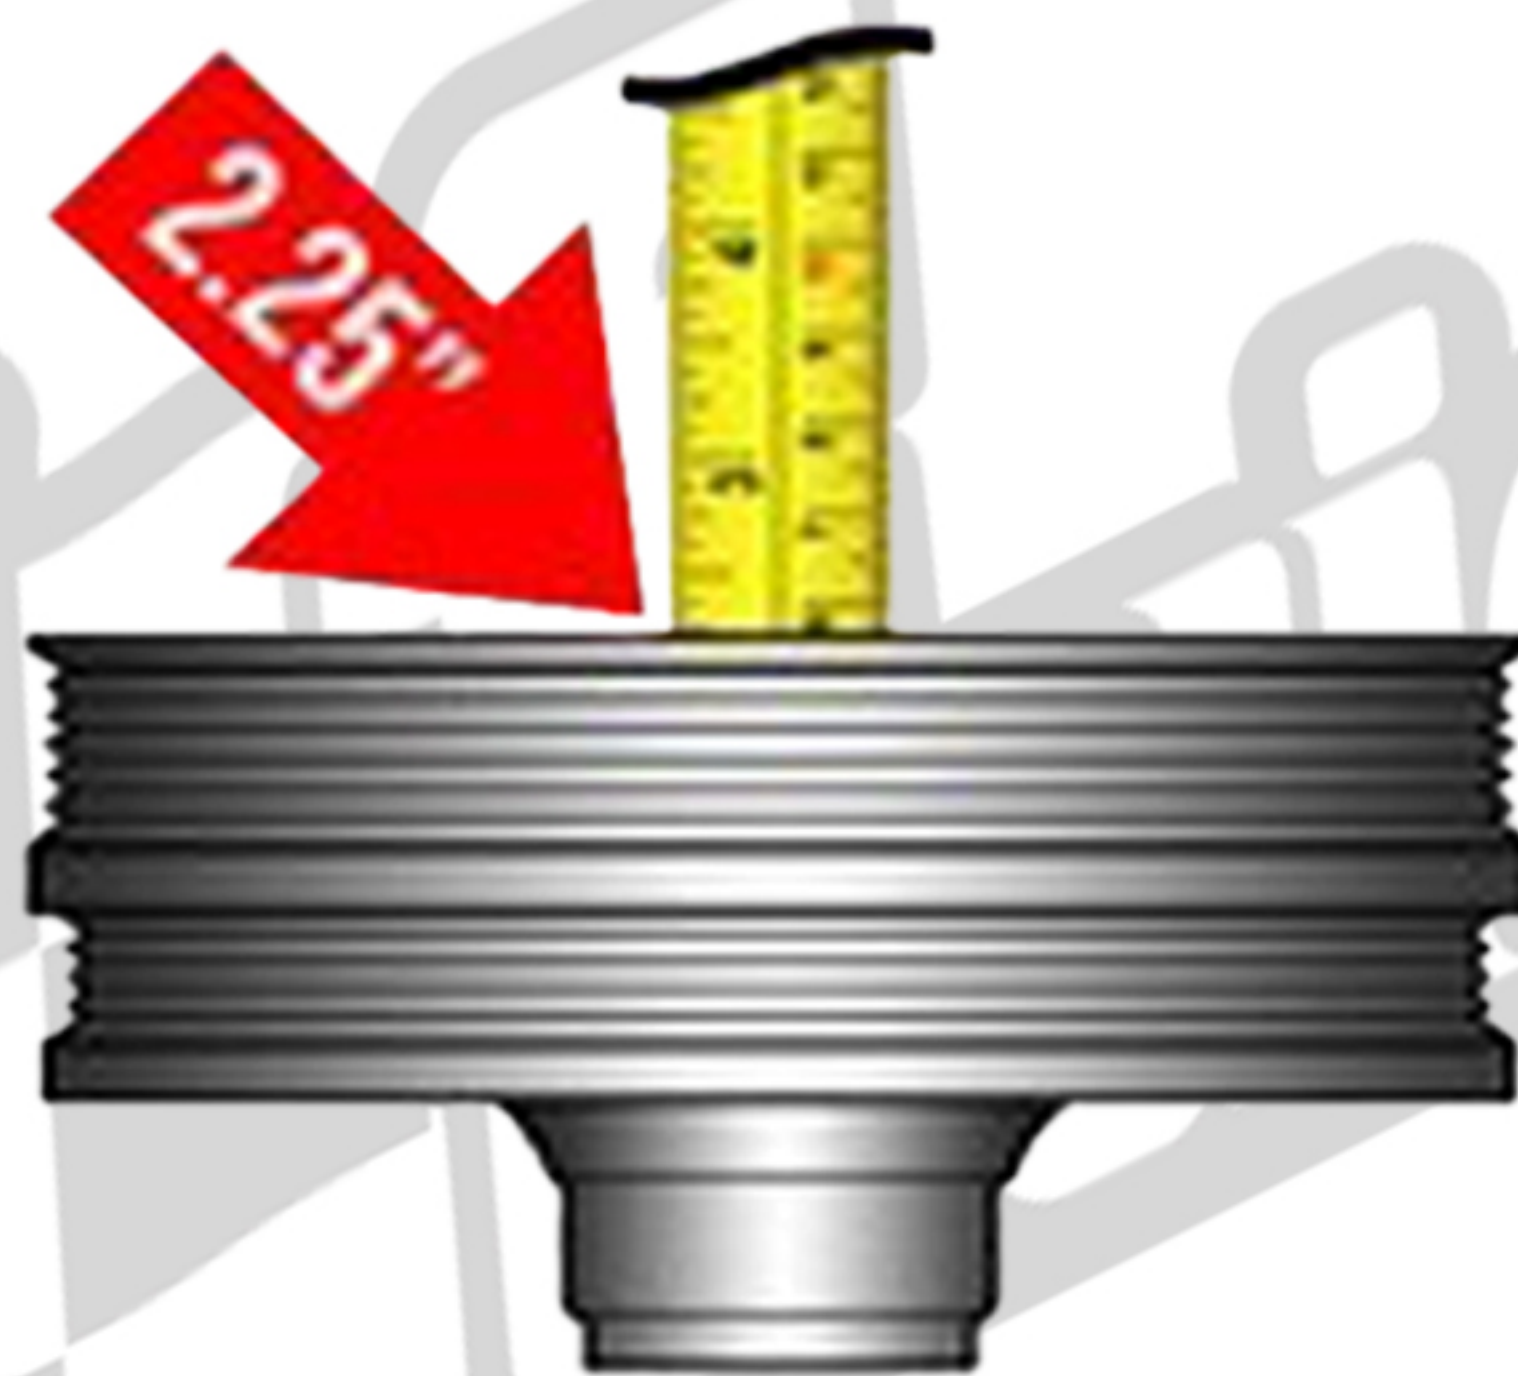

MIDDLE
F-BODY / GTO

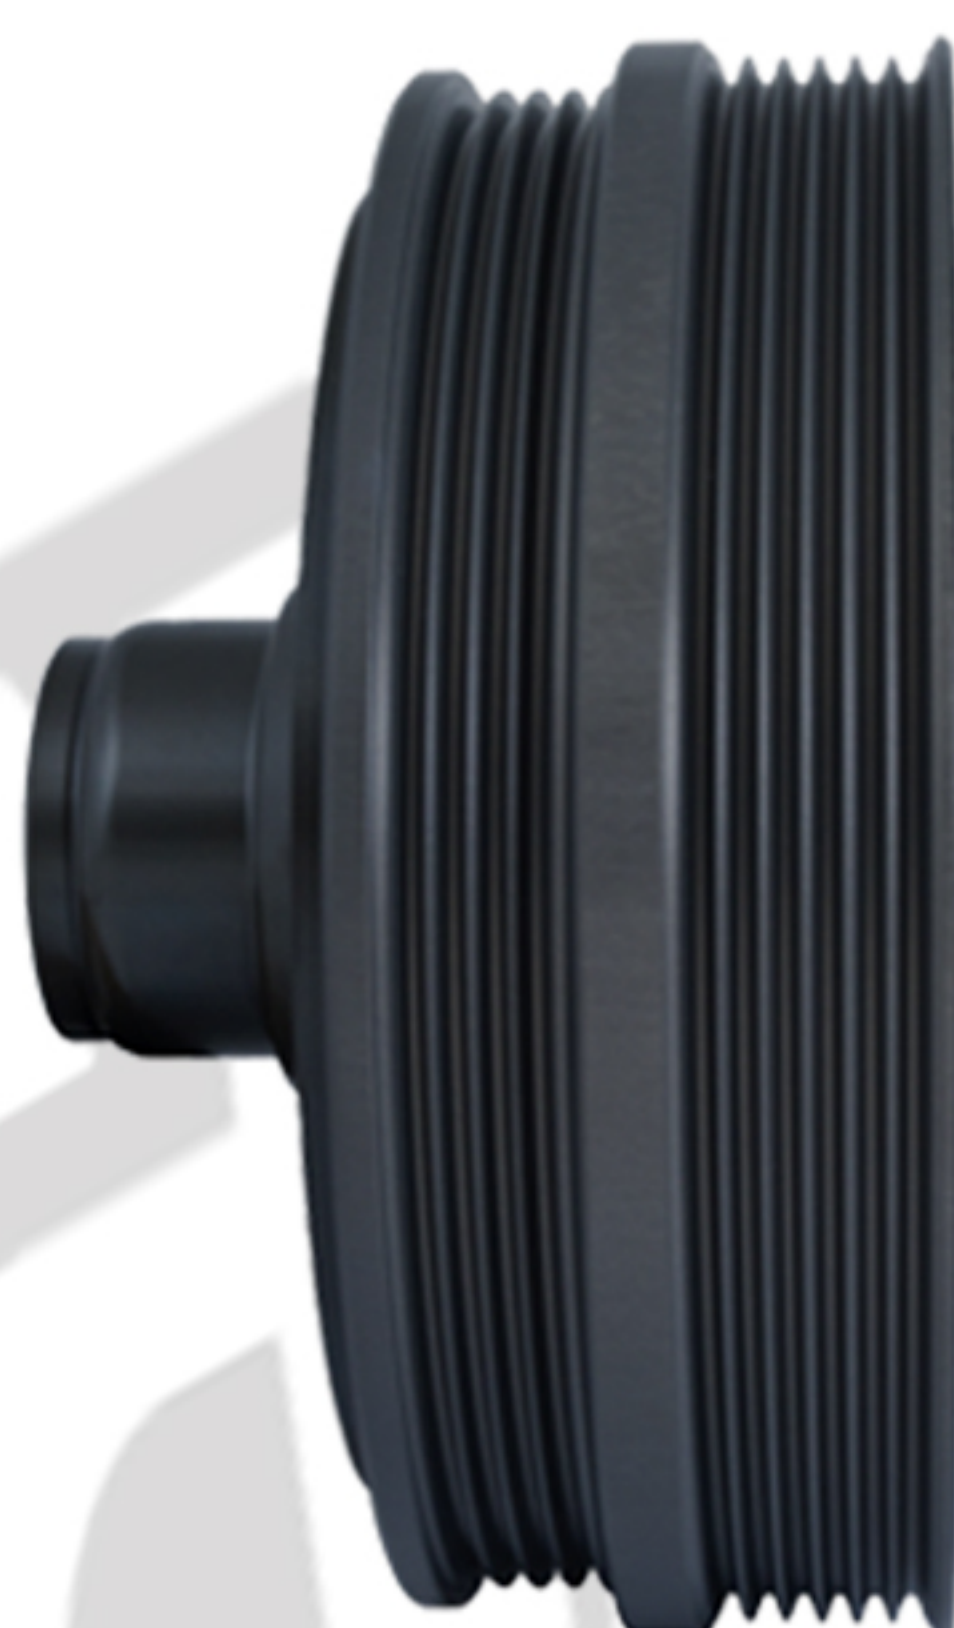

P/N 740111
P/N 620121 - no pulley

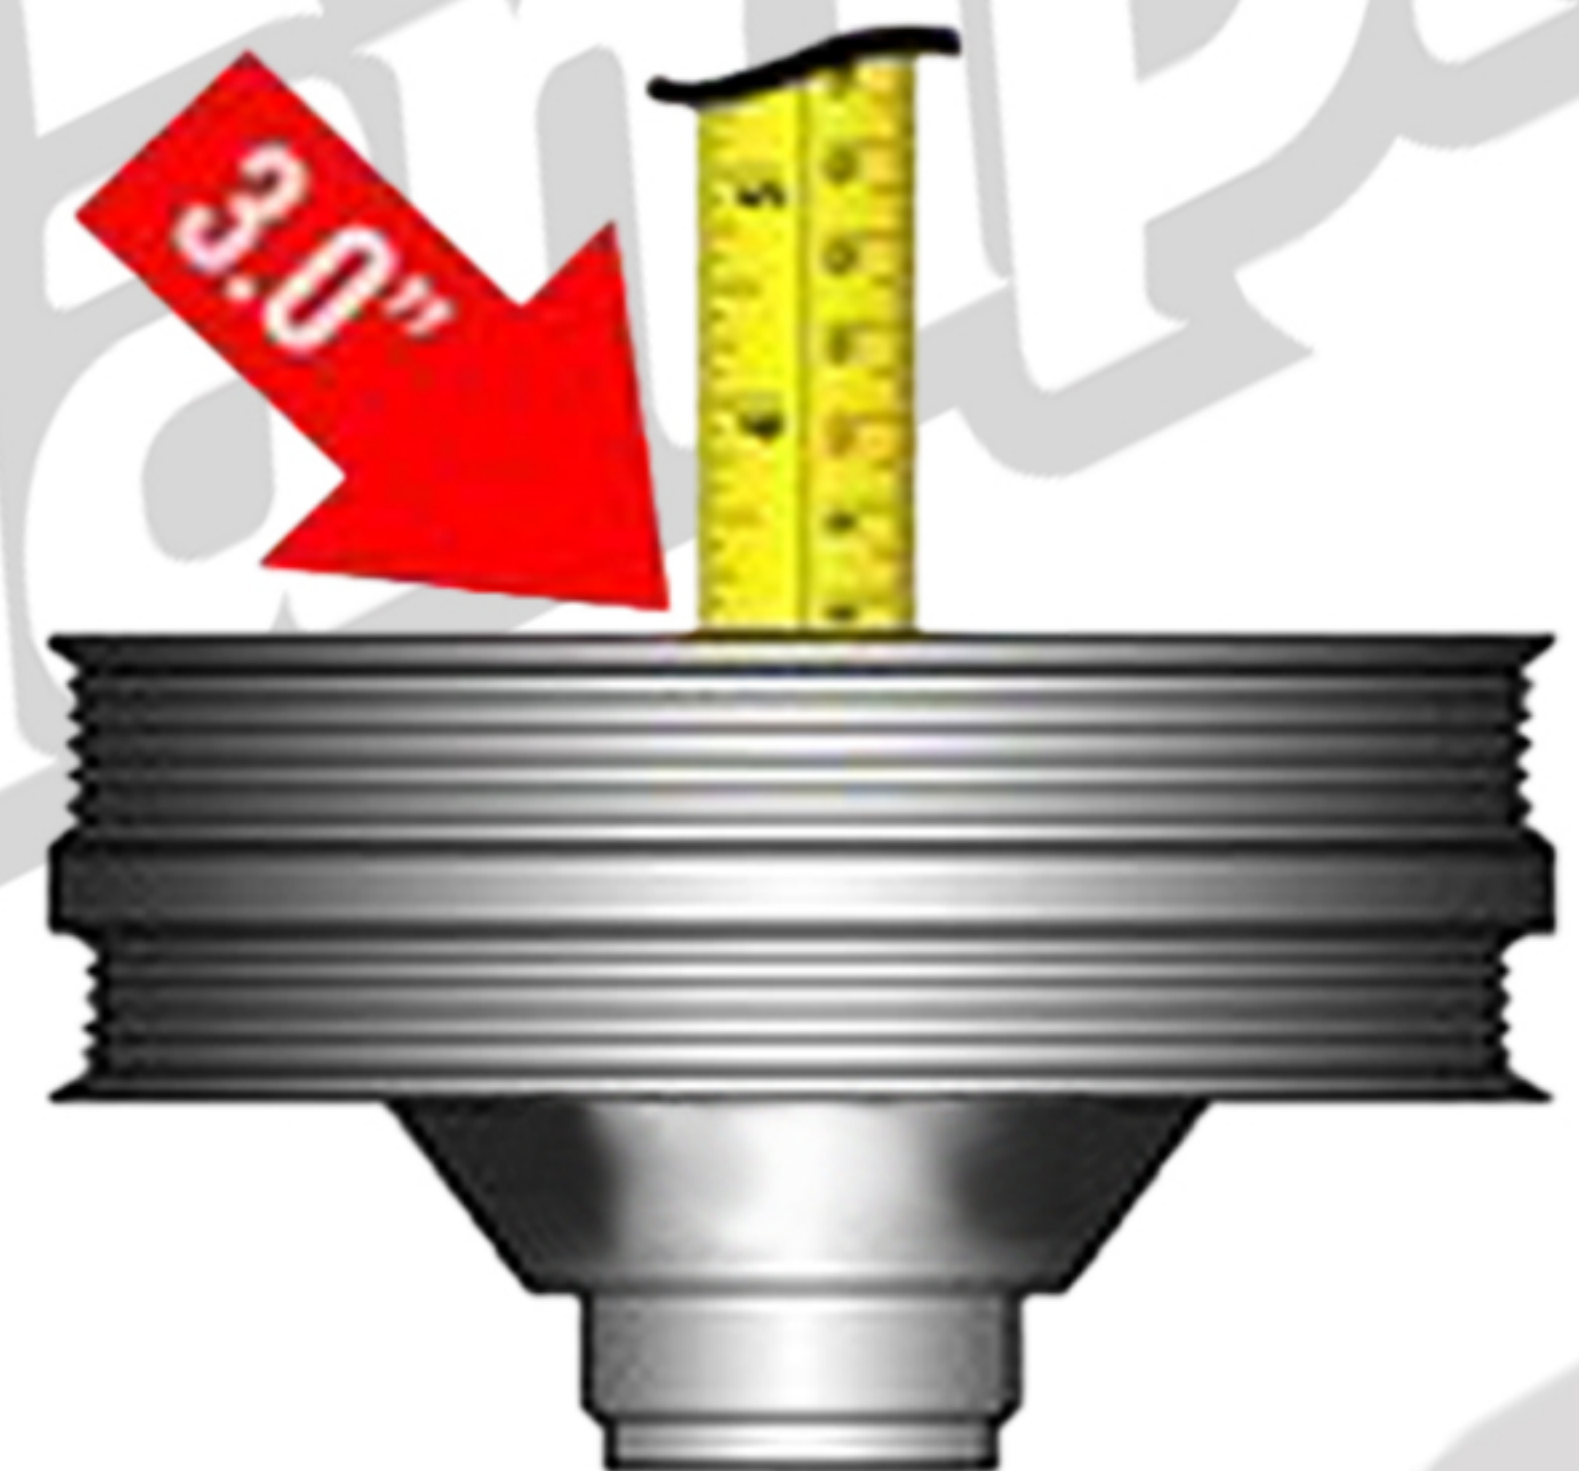

LONG
ALL TRUCKS / CAMARO ('10-'15)



P/N 760111
P/N 760121 - 25% underdrive



P/N 740121 *does not fit drysump applications.

CADILLAC	CTS	2004-2007
CHEVROLET	CAPRICE	2011-2017
CHEVROLET	CORVETTE	1997-2013
CHEVROLET	SS	2014-2015
PONTIAC	G8	2008-2009

P/N 740111

CHEVROLET	CAMARO	1998-2002
PONTIAC	FIREBIRD	1998-2002
PONTIAC	GTO	2004-2006

P/N 760111 *P/N 760121 - 25% underdrive

BUICK	RAINIER	2004-2007
CADILLAC	ESCALADE	2002-2014
CHEVROLET	AVALANCHE	2007-2013
CHEVROLET	AVALANCHE 1500	2002-2006
CHEVROLET	CAMARO	2010-2015
CHEVROLET	COLORADO	2009-2012
CHEVROLET	EXPRESS 1500	2003-2014
CHEVROLET	EXPRESS 2500	2003-2018
CHEVROLET	EXPRESS 3500	2003-2018
CHEVROLET	EXPRESS 4500	2009-2016
CHEVROLET	SILVERADO 1500	1999-2013
CHEVROLET	SILVERADO 1500 CLASSIC	2007
CHEVROLET	SILVERADO 2500	1999-2018
CHEVROLET	SILVERADO 2500 CLASSIC	2007
CHEVROLET	SILVERADO 3500	2001-2018
CHEVROLET	SILVERADO 3500 CLASSIC	2007
CHEVROLET	SSR	2003-2006
CHEVROLET	SUBURBAN	2016-2017
CHEVROLET	SUBURBAN 1500	2000-2014
CHEVROLET	SUBURBAN 2500	2000-2013
CHEVROLET	TAHOE	2000-2014
CHEVROLET	TRAILBLAZER	2003-2009
GMC	CANYON	2009-2012
GMC	ENVOY	2003-2009
GMC	SAVANA 1500	2003-2014
GMC	SAVANA 2500	2003-2018
GMC	SAVANA 3500	2003-2018
GMC	SAVANA 4500	2009-2016
GMC	SIERRA 1500	1999-2013
GMC	SIERRA 1500 CLASSIC	2007
GMC	SIERRA 2500	1999-2018
GMC	SIERRA 2500 CLASSIC	2007
GMC	SIERRA 3500	2001-2018
GMC	SIERRA 3500 CLASSIC	2007
GMC	YUKON	2000-2014
GMC	YUKON XL 1500	2000-2014
GMC	YUKON XL 2500	2000-2013
HUMMER	H2	2003-2009
HUMMER	H3	2008-2010
HUMMER	H3T	2009-2010
ISUZU	ASCENDER	2003-2006
SAAB	9-7X	2005-2009

*No LS4

*4.8, 5.3, 6.0, 6.2 same fitment.

*Recommended pinning damper for high horsepower and supercharged applications.

